



SensoMAG M40 - Installation Instruction

Conventional fire alarm heat and optical-smoke detector

7. Test the detector for proper operation and LED indication.

SensoMAG M40 - Manual de Instalação

Detector óptico-térmico incêndio convencional

7. Testar o detector e indicação dos LED'S para um funcionamento correcto.

SensoMAG M40 - Инструкция за инсталиране

Конвенционален температурен и оптично-димен детектор

7. Тествайте детектора за правилна работа и светлинна индикация.

SensoMAG M40 - Montaj Kılavuzu

Konvansiyonel sensor duman ve sıcaklık artış hızı dedektörü

7. Dedektörü çalışma ve ışıklı işaretler testine tutunuz.



- 30 V DC (Nom. 12/24VDC)
 < 50μA
 20 mA / 12÷30V
 33 mA / 12V; 49mA/24V; 57mA/30V
 18 mA / 9V; 29mA/12V; 32mA/15V
 A1/R
 20mA (max)/ -3.3V
 IP30
 0.5mm² ÷ 2.5mm²
 -10°C ÷ +60°C
 93 ± 3% @ 40°C
 ø102mm, h 48mm/ø103mm, h 62mm**
 170g/180g**

* B12L/U, B24, B24D, B24RD ** B24-HP

This manual is subject to change without notice! / Производителят си запазва правото за промени без предизвестие / Este manual está sujeito a alteração sem aviso prévio! / Imalatcının, haber vermeden deñiřkilik vanna hakkı saklıdır!

